



# IRIZAR HEAVY INDUSTRIES INC

1512 Adamson View, Edmonton, Alberta, T6W 0V4, Canada

P: 1 780 450 6695, F: 1 780 485 6677

E mail: [jirizar@jirizar.com](mailto:jirizar@jirizar.com), Website: [www.jirizar.com](http://www.jirizar.com)



## WELDING MANIPULATOR'S OPERATION MANUAL

### WM SERIES

OVERLOAD OR MISUSE of a WELDING MANIPULATOR WILL VOID THE WARRANTY and may cause PROPERTY DAMAGE, BODY INJURIES OR DEATH. Overload a Welding Manipulator could damage components without the damage being visible; therefore an overloaded welding manipulator could eventually fail at any given time without previous notice, even when manipulator is not fully loaded at moment of the failure. Before operating read carefully and understand the information below. If you have any questions or concerns, please contact us @ 1 877 IRIZAR1 or [jirizar@jirizar.com](mailto:jirizar@jirizar.com)

Revision	March	22	2017
----------	-------	----	------

Note: The information contained in this manual is intended to be accurate. However the manufacturer retain the rights to make changes in design which may not be include herein.



# IRIZAR HEAVY INDUSTRIES INC

1512 Adamson View, Edmonton, Alberta, T6W 0V4, Canada

P: 1 780 450 6695, F: 1 780 485 6677

E mail: [jirizar@jirizar.com](mailto:jirizar@jirizar.com), Website: [www.jirizar.com](http://www.jirizar.com)



## Table of Content

<b>1. Welding Manipulators WM Series</b>	<b>3</b>
WM Specifications	3
<b>2. Welding Manipulator Installation Instructions</b>	<b>4</b>
<i>Welding Manipulator with Trolley</i>	4
Main Control Box Operation	7
Remote Control Box Operation	7
<i>Welding Manipulator Self Stand</i>	7
<b>3. Lubrication and Preventive Maintenances</b>	<b>8</b>
<b>4. Warnings</b>	<b>8</b>
<b>5. Troubleshooting Procedures</b>	<b>9</b>
<i>Procedure to Re-Setting T-Verter (N2-200/400)-Late Edition</i>	9
<i>Procedure to Re-Setting T-Verter (MA7200)-Current Edition</i>	9
<b>6. Spare Part</b>	<b>10</b>
<i>Welding Manipulators (WM)</i>	10
<i>WM Series Controllers</i>	10
<b>7. Technical Drawings</b>	<b>11</b>
<i>Rail Type and Foundation</i>	11
<i>WM-General Dimensions</i>	12
<i>WM-Mechanical and Electrical Components</i>	13
<i>WM-Series Electrical Principle Diagram</i>	14
<b>8. IRIZAR Flux Recovery System Model FRU 80</b>	<b>15</b>
<i>Installation Instructions</i>	16
<i>Electrical Diagram</i>	17
<b>9. IRIZAR Seam Tracker Model 100</b>	<b>18</b>
<b>10. Welding Manipulator Boom Accessories</b>	<b>20</b>
<b>11. Limited Warranty</b>	<b>20</b>

**ASK FULL OPERATION MANUAL**

**[jirizar@jirizar.com](mailto:jirizar@jirizar.com)**